

# Stramit Condeck HP® Composite Slab System

## Design (#)

Please refer to the **Stramit Condeck HP®** Composite Slab System Product Technical Manual on product design.

## Installation (#)

Please refer to the **Stramit Condeck HP®** Composite Slab System Product Technical Manual for information on installation.

## Procurement (#)

### Obtaining Prices

Prices of **Stramit Condeck HP®** Decking and accessories can be obtained from your nearest Stramit location, or distributor of Stramit products.

### Components

The **Stramit Condeck HP®** Composite Slab system comprises:-

- **Stramit Condeck HP®** Decking – 0.75mm, 0.90mm OR 1.00mm thick
- **Stramit Condeck HP Plus™** End Span Accessory – 1.00mm
- **Stramit Edgeforma™** Slab Edging – 1.00mm (for slabs up 140mm) OR 1.60mm (for slabs up to 200mm)
- **Stramit®** Two-Part Ceiling Hanger

### Lengths

**Stramit Condeck HP®** Decking can be supplied in any length up to the limit of the local Transport Authority regulations. Where practical nominated lengths should be site measurements rather than plan dimensions. The tolerance on lengths supplied is +/- 5mm. Ensure that the lengths specified are the actual required sheet length, and not the effective spans used in design.

### Orders

**Stramit Condeck HP®** Decking and accessories can be ordered directly from Stramit, or through distributors.

### Lead Times

**Stramit Condeck HP®** Decking is normally supplied within 2 to 3 days of placement of order. Please talk to Stramit about current lead times particularly for large or non-standard orders.


### Delivery/Unloading

Lead times are subject to location and quantity. Please talk to Stramit about delivery scheduling for large projects. Ensure that suitable arrangements have been made for truck unloading, as this is the responsibility of the receiver. Pack mass may be up to one tonne.

### Site Storage

It is recommended that sheets be placed as soon as possible after delivery. If site storage is necessary packs should be kept dry and above ground. If sheets do become wet they should be separated, wiped and placed in the open to promote drying.

## Alternatives (#)

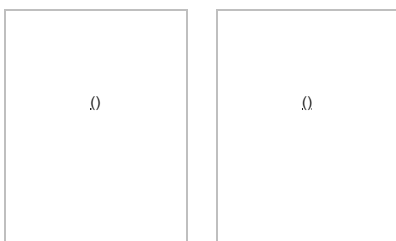




[\(/product-range/stramit-](#)

[primeform\)](#)

**[Stramit PrimeForm](#)**

[\(/product-range/stramit-](#)  
[primeform\)](#)



[\(/product-range/stramit-](#)

[condeck-hp%C2%AE-](#)

[composite-slab-system\)](#)

**[Stramit Condeck HP®  
Composite Slab  
System](#)** [\(/product-](#)  
[range/stramit-condeck-](#)  
[hp%C2%AE-composite-slab-](#)  
[system\)](#)